


BJ3496 MOVEMENT INSTRUCTION



A. Features

- > 13 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- ➤ Daily Alarm and Chime hourly
- > 12 / 24H format selectable, Auto Calendar
- ➤ 1/100 second Chronograph with split functions
- > Timer
- Dual Time
- > key tone
- ➤ EL backlight

B . Operational Manual

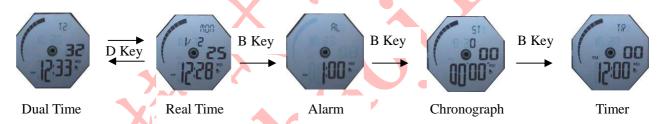

1. At any state ,press A key EL backlight for 3s.

2. Real Time

- Time Setting
 - a). Press and hold C key for 2s to time setting state and "Second" flashing, press D key to zero; Press B key to select item as following sequence:

Second → Minute → Hour → 12/24H format → Month → Day → Week

- b). Press D key to adjust the flashing item,
- c). Press C key to return to Real Time Mode.
- d). Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 59 resets them to 00 and adds to the minutes. In the range of 00 to 29, the minutes are unchanged.

3. Daily Alarm

> Turn On / Off Alarm and Chime

Press D key to turn on/off Alarm (A))) or Chime ().

➤ Alarm setting

Press and hold C key for 2s to select "Hour" setting; Press B key to select "Minute" setting; Press D key to adjust the flashing item.

There will be 20s alert when alarm time is over.

2011-12-23 Model: BJ3496 Page: 1 / 2 Edition : B



BJ3496 MOVEMENT INSTRUCTION



4. Chronograph

- The display range of the Chronograph is 23 hours ,59 minutes ,59.99 seconds.
- Press D key to Start/Stop running;
- When stop ,press C key to zero .
- When running ,press C key to split Counting. Then press D key to exit split count ,and stop counting; When exit split count, press C key to zero.
- When running ,press B key to return to Real Time mode ,and it running at back .

5. Timer mode

- The display range of the timer is 23hour 59minute 59 second.
- Timer alarm sounds for about 10 seconds when counting down to 0:00:00. The timer isautomatically reset to its starting value after the alarm stops.
- Timer Time setting

Press and hold C key for 2s to time setting state and "Hour" flashing, Press B key to select "Hour" or "Minute" setting, Press D key to adjust the flashing item, Press C key to complete setting.

Timer operation

Press D key to Start/Stop counting; Press C key to starting value when stop counting.

6. Dual Time

Dual Time setting

In the Dual Time mode ,Press and hold C key for 2s to select "Minute" setting, Press B key to select "Hour" setting, Press D key to adjust the flashing item, Press C key again to finish setting, and return to Dual Time displaying mode.

C. Specifications

Module Size : Φ37.2mm

Module Thickness (include buzzer) : 8.8mm

Operational Temperature Range : -10°C~60°C

Operational Voltage

Accuracy

Battery Code

static average current

Alarm average current

EL lighten average current

Battery life

: 3.0V

 ± 30 sec/month

: CR2016(capacitance: 90m Ah)

 \leq 2.19u A (static maximum current: 3.5uA)

 $\leq 2.17 \,\mathrm{m\,A}$ (Alarm maximum current: 7.0mA)

 ≤ 10.82 m A (ELlighten maximum current: 12.0mA)

: ≥18 month(Japan Lithium)

(Battery life calculate according to EL lighten four time each day for 3 second each time, alarm foe 60 seconds each day)

	Prepared	Checked	Approve
Name	冯碧颜	徐治中	宋检望
Date	11/12/23	11/12/23	11/12/23

Page: 2 / 2 2011-12-23 Model: BJ3496 Edition: B