

# **BJ3637** MOVEMENT INSTRUCTION





#### A. Features

- ➤ 6 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- Daily Alarm and Chime hourly
- > 12 / 24H format selectable, Auto Calendar
- ➤ 1/100 second Chronograph
- Dual time.
- EL backlight

## **B** . Operational Manual



### 1. At any state ,press A key EL backlight for 3s.

#### 2. Real Time

- Press C key for 2 seconds to enter into the time setting mode. "Second " flashing when loading, press B key to zero; Press C key to select the blinking digit according to the following sequence: Hour → Minute → 12H/24H. Press B key to adjust the flashing
- Press B key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.
- ➤ If there is no key operation for 60 second, Setting Mode will be exit and returned to Real Time Display Mode.

#### 3. Date Mode

- Press C key for 2 seconds to enter into the date setting mode "Year" flashing when loading .Press C key to select item as following sequence: "Month", Day .Press B key to adjust the flashing .
- If there is no key operation for 60 second, Setting Mode will be exit and returned to Date Display Mode.

#### 4. Daily Alarm

- ➤ Press C key for 2 seconds to enter into the date setting mode, "Hour " flashing .Press C key to select item as following sequence: " Minute (hour digit ) ", " Minute (Minute digit ) ", " ALARM/CHIME " switch .
- Press B key to adjust the flashing.

2014-03-12 Model: BJ3637 Page: 1 / 2 Edition : A



# **BJ3637** MOVEMENT INSTRUCTION



➤ Intercalate "ALRM/CHIME" switch, gradation as follows:

ALARM ("•1)") /CHIME ("
$$\nabla$$
") ON  $\longrightarrow$  ALARM ("•1)") /CHIME (" $\nabla$ ") OFF

CHIME ON (" $\nabla$ ")  $\longleftarrow$  ALARM ("•1)") ON

- ➤ There will be 20s alert when alarm time is over.
- ➤ If there is no key operation for 60 second, Setting Mode will be exit and returned to Alarm Display Mode.

#### 5. Dual time

- ➤ Press C key for 2 seconds to enter into the Dual time setting mode," Hour " flashing when loading, Press C key to select item as following sequence:

  Minute → 12H/24H
- Press B key to adjust the flashing.
- ➤ If there is no key operation for 60 second, Setting Mode will be exit and returned to Dual Time Display Mode.

#### 6. Chronograph

Press C key to Start/Stop running; When stop, press C key for 2 seconds zero.

## C. Specifications

 $\triangleright$  Module Size :  $\Phi$  33.2mm

Module Thickness (include buzzer): 8.80mm

➤ Operational Temperature Range : -10°C~60°C

Operational Voltage : 3.0V

 $\rightarrow$  Accuracy :  $\pm 90 \text{sec/month}$ 

Battery Code : CR2016 (capacitance:90m Ah)

➤ static average current : ≤1. 30u A (static maximum current : 3.5uA)

Alarm average current
 ∴ ≤1.70m A
 ∴ ≤1.70m A
 ∴ ≤8.50m A
 ← (Alarm maximum current : 6.0mA)
 ← (ELlighten maximum current : 10.0mA)

 $\triangleright$  Battery life (90%) :  $\ge 18$  month

Under the following conditions: (4 backlight operation (3 seconds) perday; 60 seconds of alarm operation per day)

	Prepared	Checked	Approve
Name	冯碧颜	徐治中	刘成恒
Date	14/03/12	14/03/12	14/03/12

2014-03-12 Model: BJ3637 Page: 2 / 2 Edition : A