BJ3620 MOVEMENT INSTRUCTION

HAND1 （C Key）——

—— （A Key）LIGHT/ SET

—— （B Key）MODE

HAND2 （D Key）——

A . Features

- 6 Digits LCD Display，Display Hour ,Minute ,Second ,Month ,Day and Week
- Daily Alarm and Chime hourly
- 12 / 24H format selectable，Auto Calendar
- 1/100 second Chronograph
- Dual time .
- Movement of in-phase
- EL backlight

B . Operational Manual

Real Time Mode　　B Key →　Date Mode　　B Key →　Alarm Mode　　B Key →　Dual time Mode　　B Key →　Chronograph Mode

1. **At any state ,press A key EL backlight for 3s .**
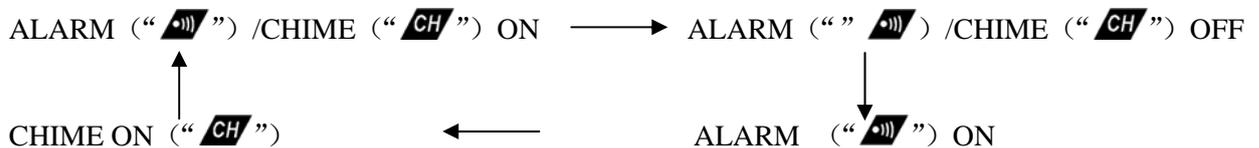2. **Real Time**
- Press A key for 2 seconds to enter into the time setting mode. "Second " flashing when loading , press B key to zero ; Press A key to select the blinking digit according to the following sequence: Hour —→ Minute —→ 12H/24H . Press C key to adjust the flashing
- Press B key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes . In the range of 00 to 29,the minutes are unchanged.
- If there is no key operation for 60 second, Setting Mode will be exit and returned to Real Time Display Mode.

3. **Date Mode**
- Press A key for 2 seconds to enter into the date setting mode "Month" flashing when loading .Press A key to select item as following sequence: Day and Week .Press C key to adjust the flashing .
- If there is no key operation for 60 second, Setting Mode will be exit and returned to Date Display Mode.

4. **Daily Alarm**
- Press A key for 2 seconds to enter into the date setting mode, "Hour " flashing .Press A key to select item as following sequence: " Minute (hour digit) "、" Minute (Minute digit) "、" ALARM/CHIME " switch .
- Press B key to adjust the flashing .
- Intercalate " ALRM/CHIME " switch , gradation as follows：

ALARM（" ◖))) "）/CHIME（" CH "）ON ——→ ALARM（" ◖))) "）/CHIME（" CH "）OFF

CHIME ON（" CH "）　←——　ALARM （" ◖))) "）ON

- ➢ There will be 20s alert when alarm time is over.
- ➢ If there is no key operation for 60 second, Setting Mode will be exit and returned to Alarm Display Mode.

5. Dual time

- ➢ Press A key for 2 seconds to enter into the Dual time setting mode," Hour " flashing when loading , Press A key to select item as following sequence :
  Minute ⟶ 12H/24H
- ➢ Press B key to adjust the flashing.
- ➢ If there is no key operation for 60 second, Setting Mode will be exit and returned to Dual Time Display Mode.

6. Chronograph

- ➢ Press A key to Start/Stop running ;
- ➢ When stop , press A key for 2 seconds zero .

C. Specifications

- ➢ Module Size : Φ40.20mm
- ➢ Module Thickness（include buzzer）: 8.80mm
- ➢ Operational Temperature Range : -10℃~60℃
- ➢ Operational Voltage : 3.0V
- ➢ Accuracy : ±90sec/month
- ➢ Battery Code : CR2016(capacitance: 90m Ah)
- ➢ static average current : ≤3.91u A (static maximum current ：295uA)
- ➢ Alarm average current : ≤1.07m A （Alarm maximum current ：5.0mA）
- ➢ EL lighten average current : ≤7.56m A （EL lighten maximum current ：10.0mA）
- ➢ Battery life : ≥18 month(Japan Lithium)

Under the following conditions:(4 backlight operation (3 seconds) per day; 60 seconds of alarm operation per day)

	Prepared	Checked	Approve
Name	冯碧颜	徐治中	刘成恒
Date	14/11/27	14/11/27	14/11/27