




A. Features

- ➤ 12 Digits LCD Display, Display Hour, Minute, Second, Year(Year 2000~Year 2099), Month, Day and Week
- Alarm Mode: Alarm of Normal time (Home Time) and Alarm of the Dual Time (the Second Time / T2)
- > Chime signal.
- ➤ 12-hour / 24-hour format selectable .
- Stopwatch counts 1/100 second, seconds, minutes and maximum take four Lap or Split time.
- Countdown timer' max value is 23 hours and 59 minutes .(The maximum countdown timer can be set in the range of 23hours 59minutes)
- Dual Time.
- EL backlight.
- ➤ Key tone

B. Operational Manual

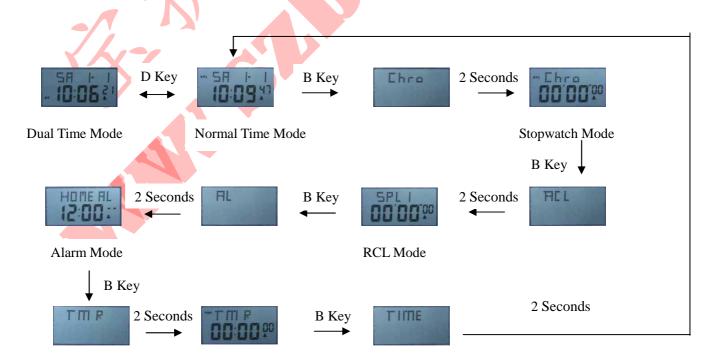

Countdown Timer Mode

2011-04-25 Model: BJ3421 Page: 1 / 4 Edition : A






1. In normal time mode, press A key, EL will light for three seconds, and press B key to select different operating mode.

2. Normal time mode(TIME)

- In the Normal Time Mode. Hold down C key for two seconds to enter time setting.
 - a) At this time, "second" starts to flash, press D key, seconds get to zero, press B key to move the flashing in sequence shown below to select other settings:



- b) Press D key to adjust setting items.
- c) Press C key to confirm and return to time display mode.
- d) When set the "seconds",, if the current count is in the range of 30 to 59, the minutes will increased by 1 when the seconds reset to 00. In the range of 00 to 29, the seconds are reset to 00 without changing the minutes.
- e) Week will adjust automatically according to the date which have been set (year, month, date).
- f) The year can be set in the range of 2000 to 2099.
- g) With 24-hour format, times are displayed in the range of 0:00 to 23:59, no 24-hour indicator appears.

3. Dual Time Mode (DT)

- The Dual time can display another time of different time zone.
- In the Dual Time Mode, the count (seconds, month, date, day) is synchronized with the count of the Normal Time Mode.
- To set dual time: In dual time mode, hold down C key for two seconds to enter dual time setting screen, at this moment, "hour" starts to flash, and press B key, until "minute" starts to flash, when related item is flashing, you can press C key to adjust, then press C key again to exit setting screen.

4. Stopwatch Mode

- Stopwatch includes SPL and LAP. When SPL time and LAP time reset to 00, press C key can toggle between SPL time and LAP time.
- The display range of the stopwatch is 59 minutes, and 59.99 seconds.
- > ,The stopwatch will continue to measure time if you do not stop it, when the stopwatch reaches its limit, it will restart to measure from zero.
- Exiting the stopwatch mode while a split time is frozen on the display, it will return to elapsed time measurement automatically.


2011-04-25 Model: BJ3421 Page: 2 / 4 Edition : A






➤ When use stopwatch to measure:

To measure times with the stopwatch (LAP)

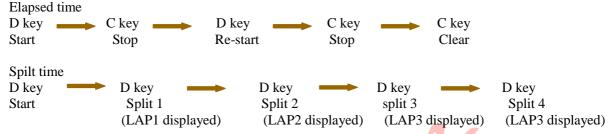

To measure times with the stopwatch (SPL)



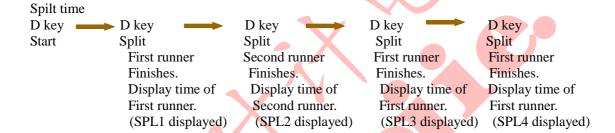

- After Split value displays for 4 second, it will be return display running value automatically.
- When SPL time are recorded fullly, old SPL time records will be covered with new SPL time.

5. Recall Mode (RCL)

- In RCL mode, SPL and LAP can be viewed.
- When SPL time and LAP time reset to 00, press C key can toggle between SPL time and LAP time.
- In LAP time, press D key to view the time from LAP1 to LAP4.
- In SPL time, press D key to view the time from LAP1 to LAP4.

6. Alarm Mode (AL)

- In alarm mode, press C key to view the alarm of Normal Time(Home Time) or the alarm of Dual Time(the Second Time /T2).
- Alarm mode of normal time(Home time) or alarm mode of dual time(T2), hold down C key for two seconds to enter alarm setting.
 - a) At this moment, "Hour" starts to flash, press B key to select items in sequence as below:

- b) Press D key to adjust selected items.
- c) Press C key to confirm and return to alarm display mode.

2011-04-25 Model: BJ3421 Page: 3 / 4 Edition : A





- In alarm mode of normal time (home time), press D key to turn on / off the indicators of alarm and chime signal "A" in sequence. Chime signal can only be turned on in alarm mode of timekeeping.
- In alarm time of dual time (the second time /T2), press D key to turn on / off the alarm indicator in sequence.
- ➤ In the case of alarm tone is on, sounds indicator " **li•** "of alarm will display on the screen.
- In the case of alarm tone is on, alarm will stop ringing automatically after ringing for 20 seconds when alarm time is reached, you can press any key to stop alarming.

7. Countdown timer mode(TMR)

- The countdown time can be set in the range of one minute to 23 hours 59 minutes, alarm will ring if countdown time is reached.
- Press D key to start counting down, and press Ckey to stop counting down, when countdown is stopped, press C key countdown will reset to the initial time.
- ➤ Hold down C key for two seconds to enter conutdown setting screen:
 - a) At this time, "hour" starts to flash, press B key to select setting item in sequence as below:

- b) Press D key to adjust setting item.
- c) Press C key to confirm.
- If you don't stop countdown timer, it will continue to run even though the watch has exited countdown timer mode.

C. Specifications

Module dimension

Module thickness (including buzzer)

Operational temperature range

Operational voltage

Battery code and capacity

Time accuracy

> Static average current

Alarm average current

➤ Average current of EL lightening

Battery life

: 28.3*26.5mm

: 7.90mm

: -10°C ~+60°C

: 3.0V

: CR2025(Capacity:170m Ah)

: $\pm 30 \text{ sec/month}$

: ≤2.25u A (Static maximum current: 4.0 u A)

: ≤0.91m A (Alarm maximum current: 6.0m A)

: ≤7.80m A (Maximum current of EL lightening: 10.0mA)

: ≥24months (Made in Japan)

EL lights four times per day, it lights for three seconds each time, light for 12 seconds in total in a day. Alarm rings for 60 seconds every day.

| | Prepared | Checked | Approved |
|------|----------|----------|----------|
| Name | 李觉 | 赵星亮 | 宋检望 |
| Date | 11/04/25 | 11/04/25 | 11/04/25 |

2011-04-25 Model: BJ3421 Page: 4 / 4 Edition : A